


1. Manufacturers should not scale from this drawing
2. For structural dimensions and details see Structural Engineers' drawings.
3. All dimensions to be checked on site prior to commencement of any works or preparation of any shop drawings.
4. All errors in co-ordinates, levels and dimensions, are to be reported to the Architect.
5. All temporary works to be responsibility of the contractor.
6. This drawing to be read in conjunction with all relevant Architect's drawings and specifications and with other Consultant's Information.

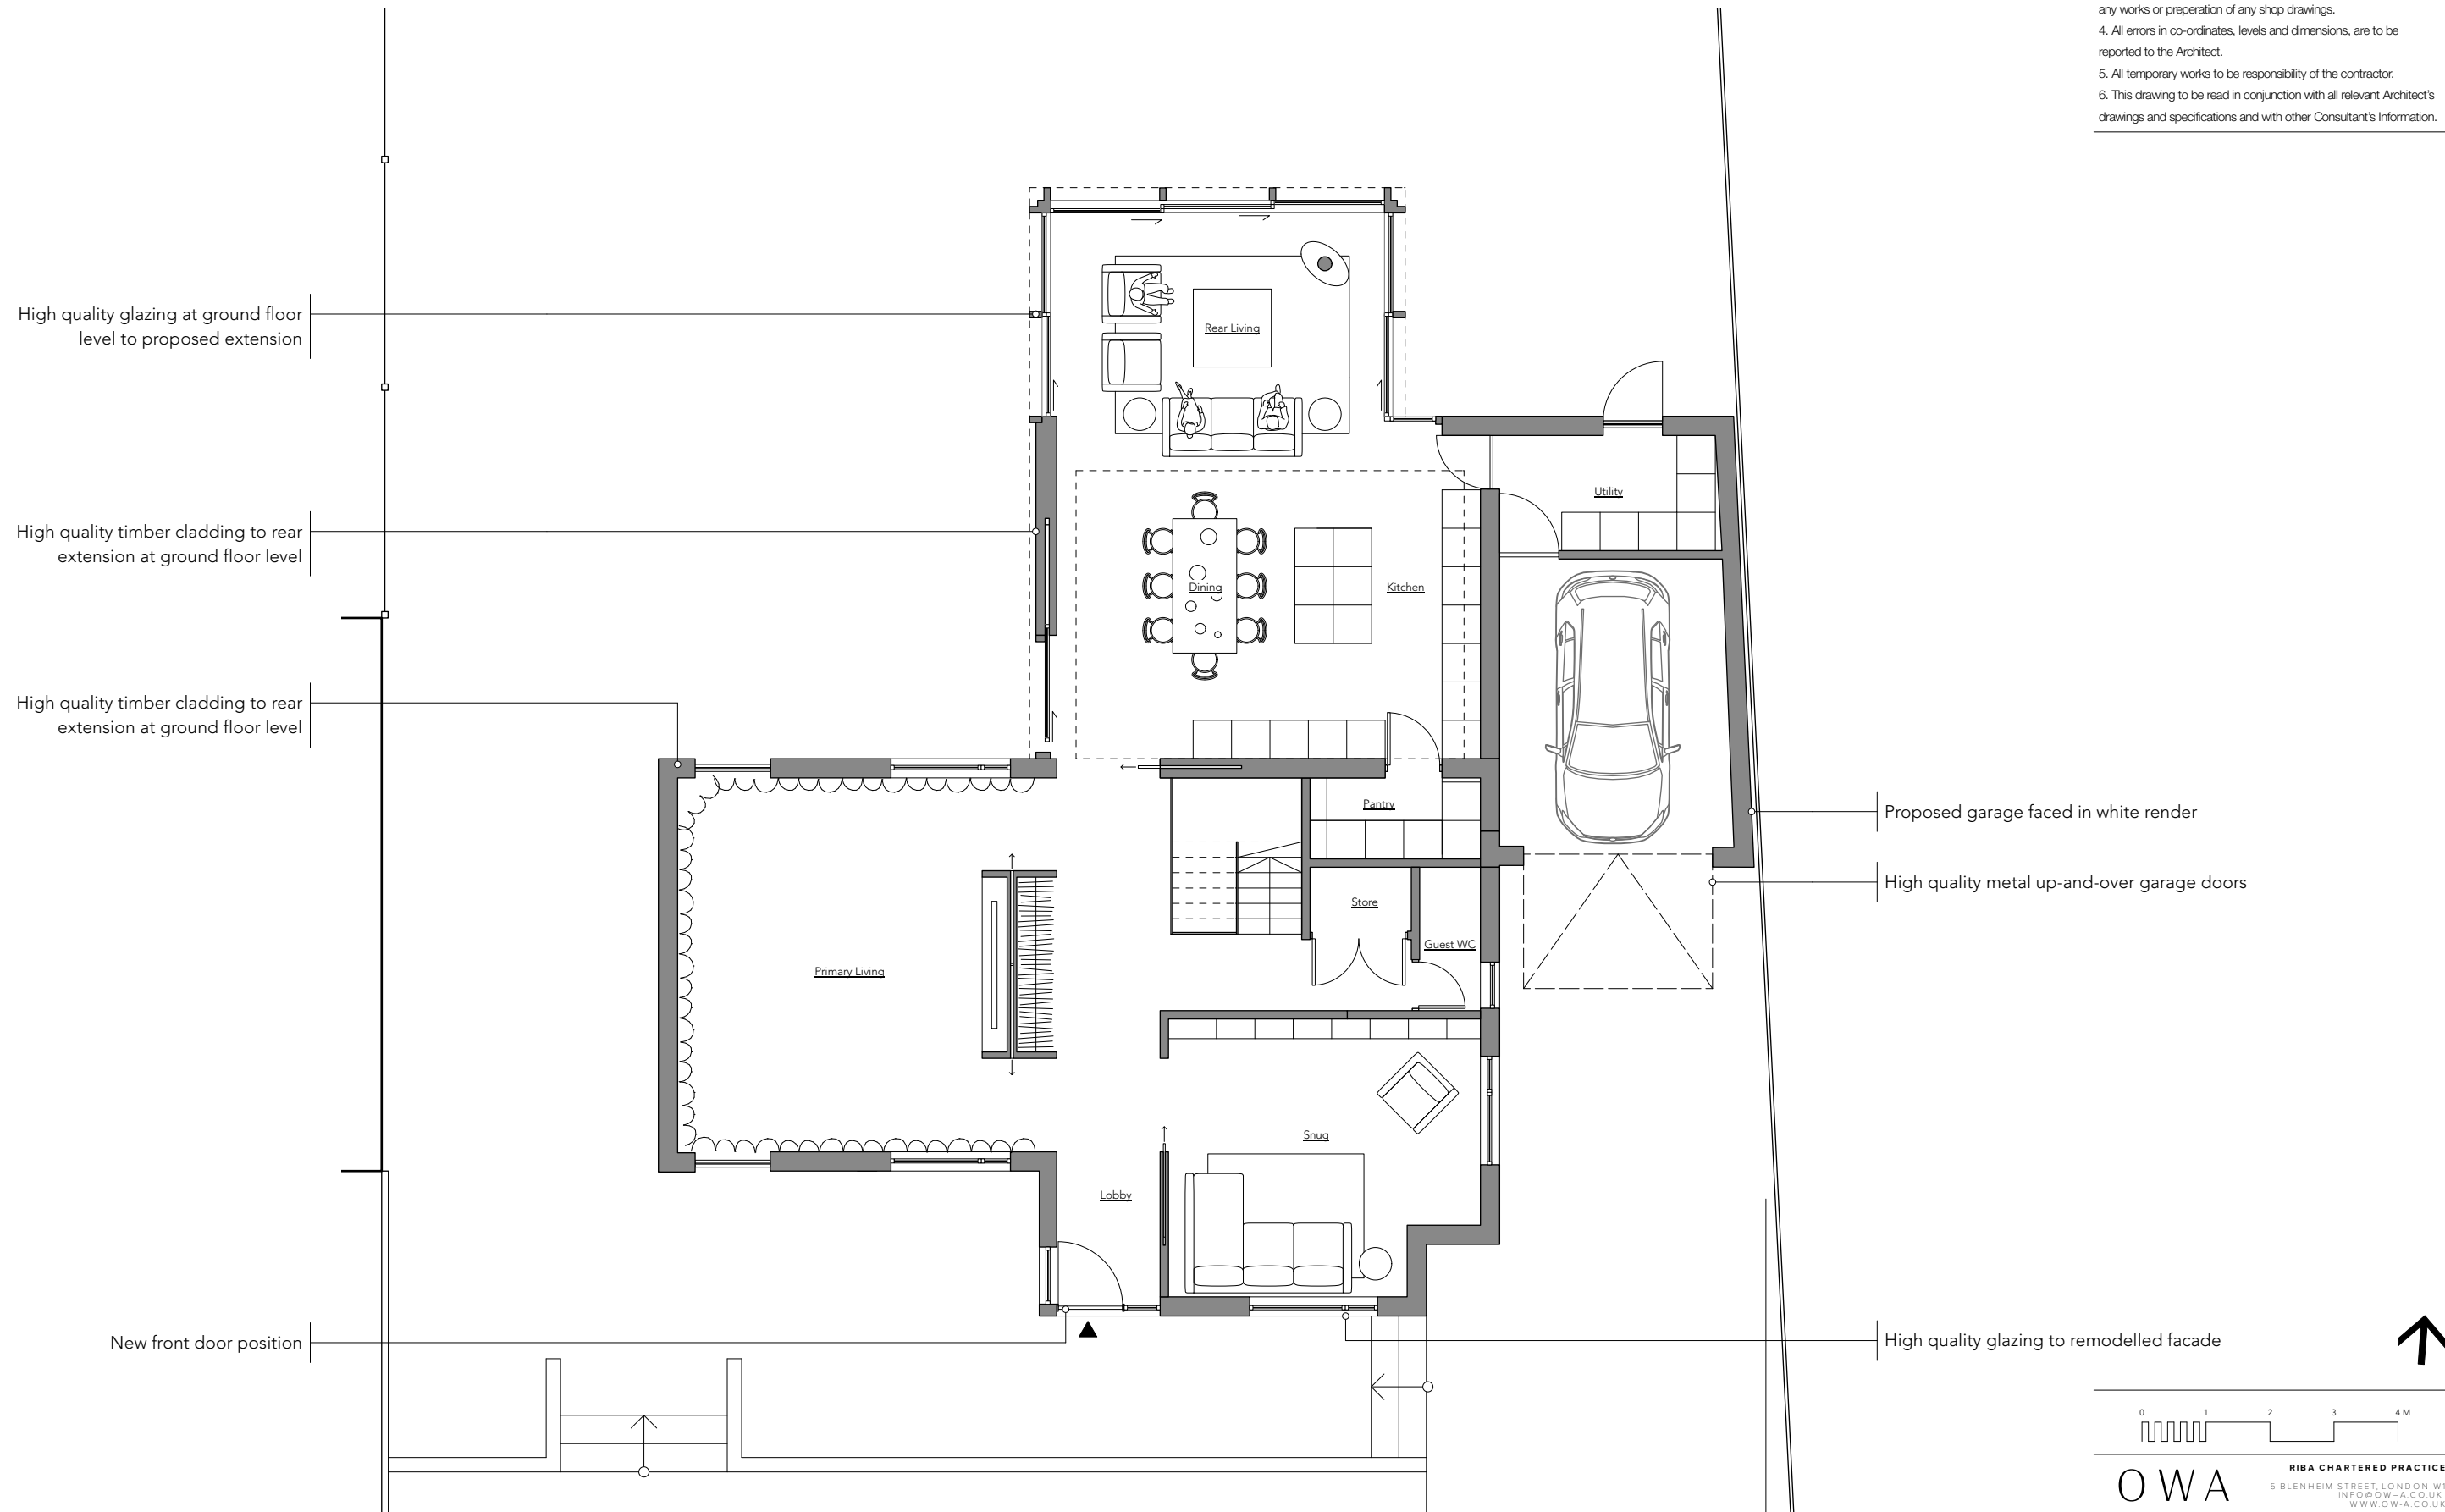

Proposed Ground Floor Plan