
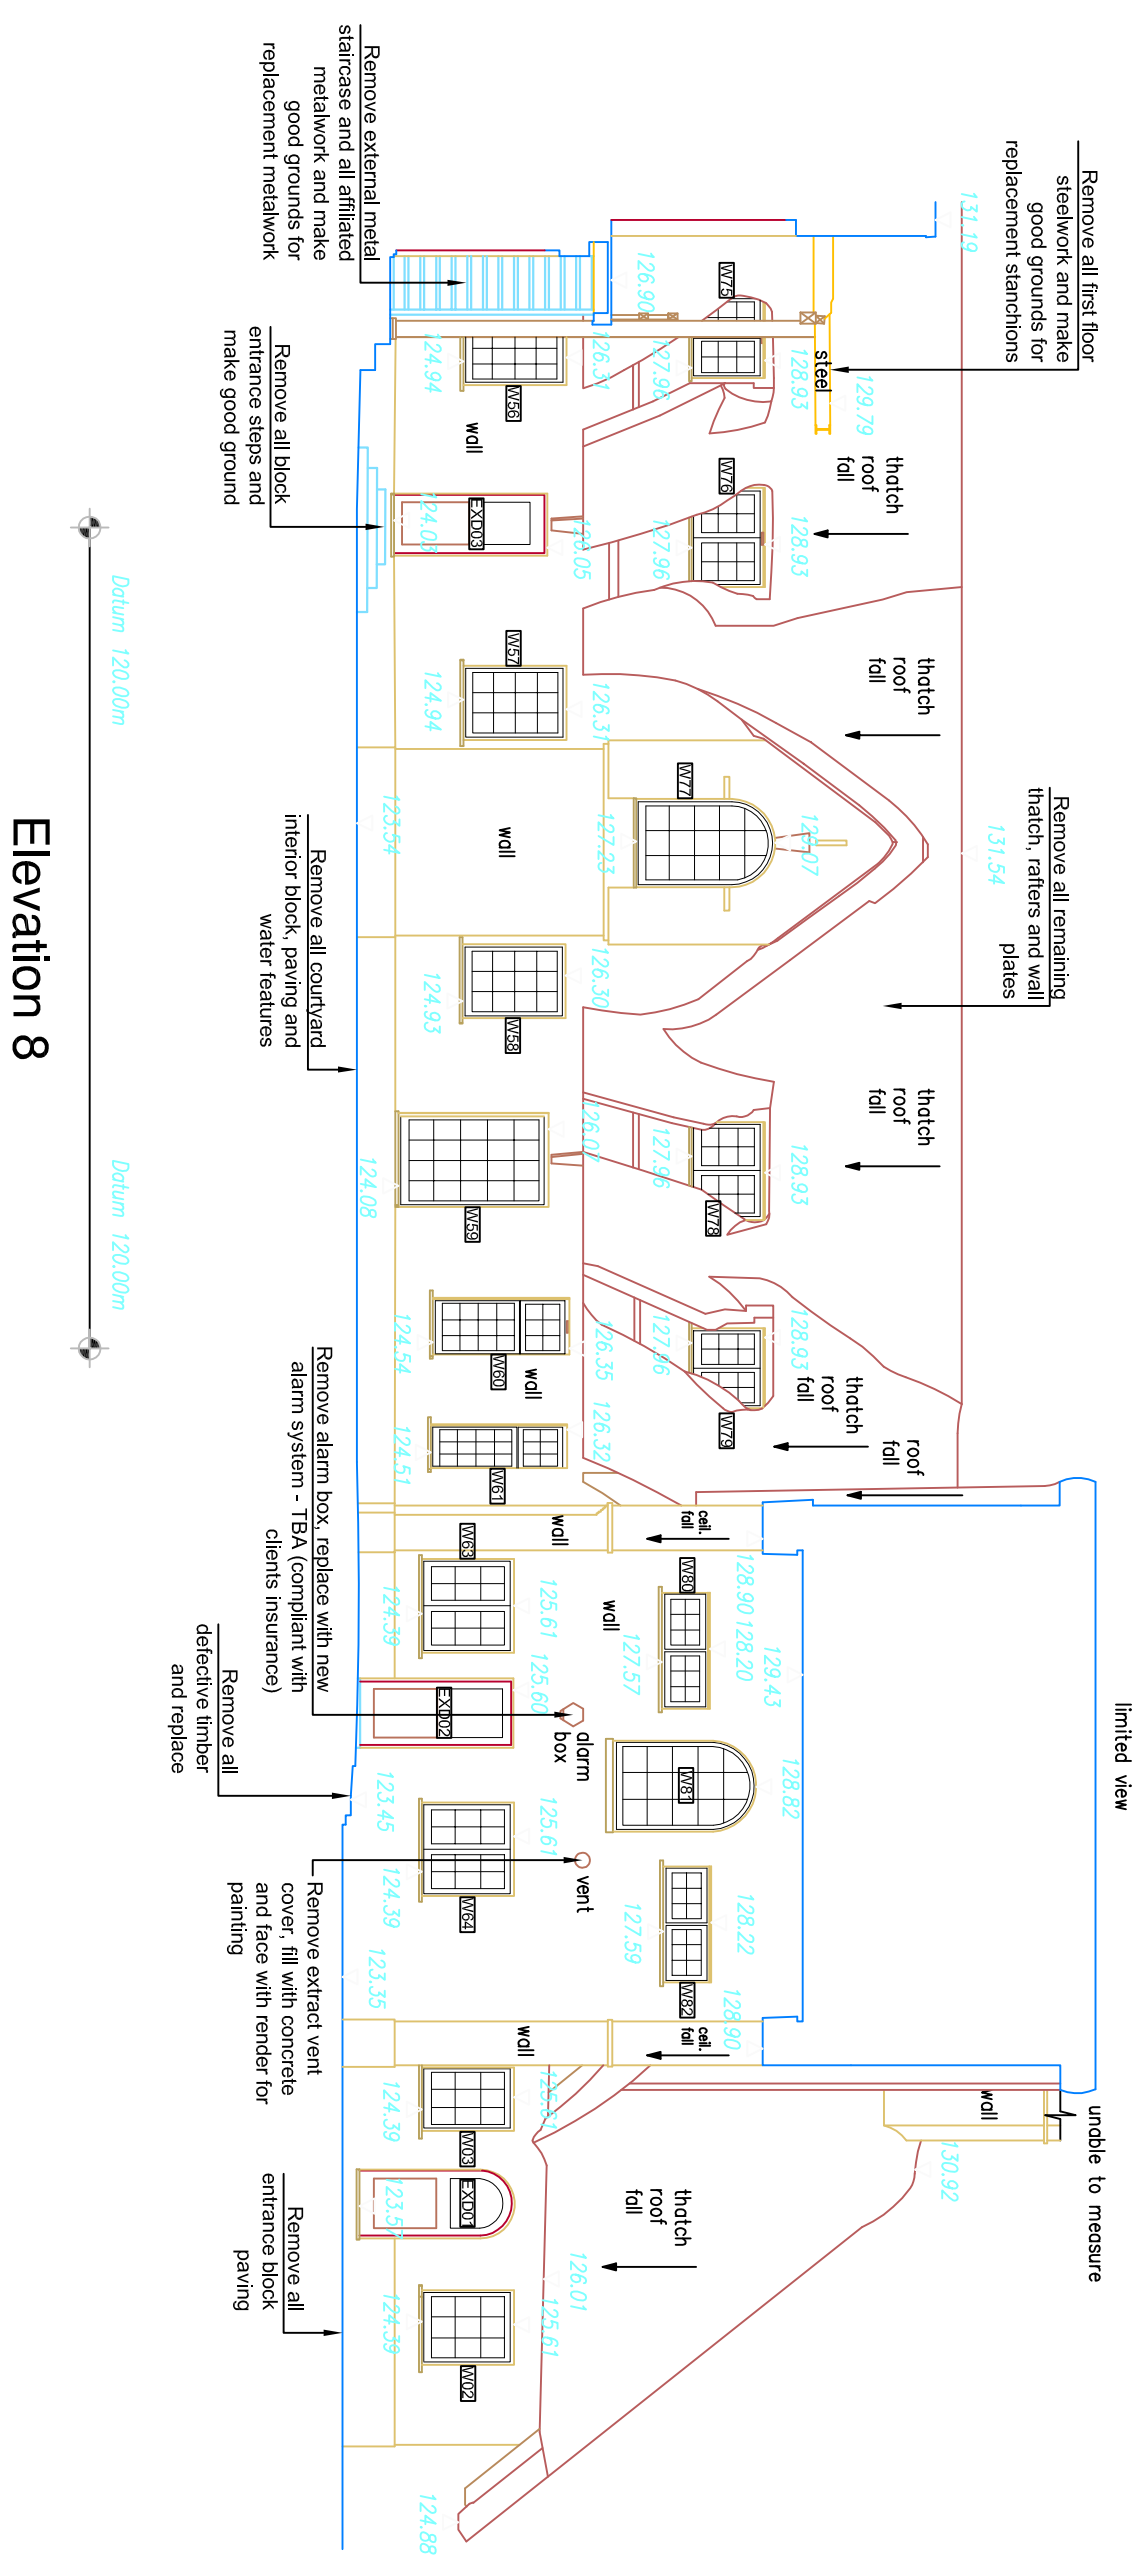


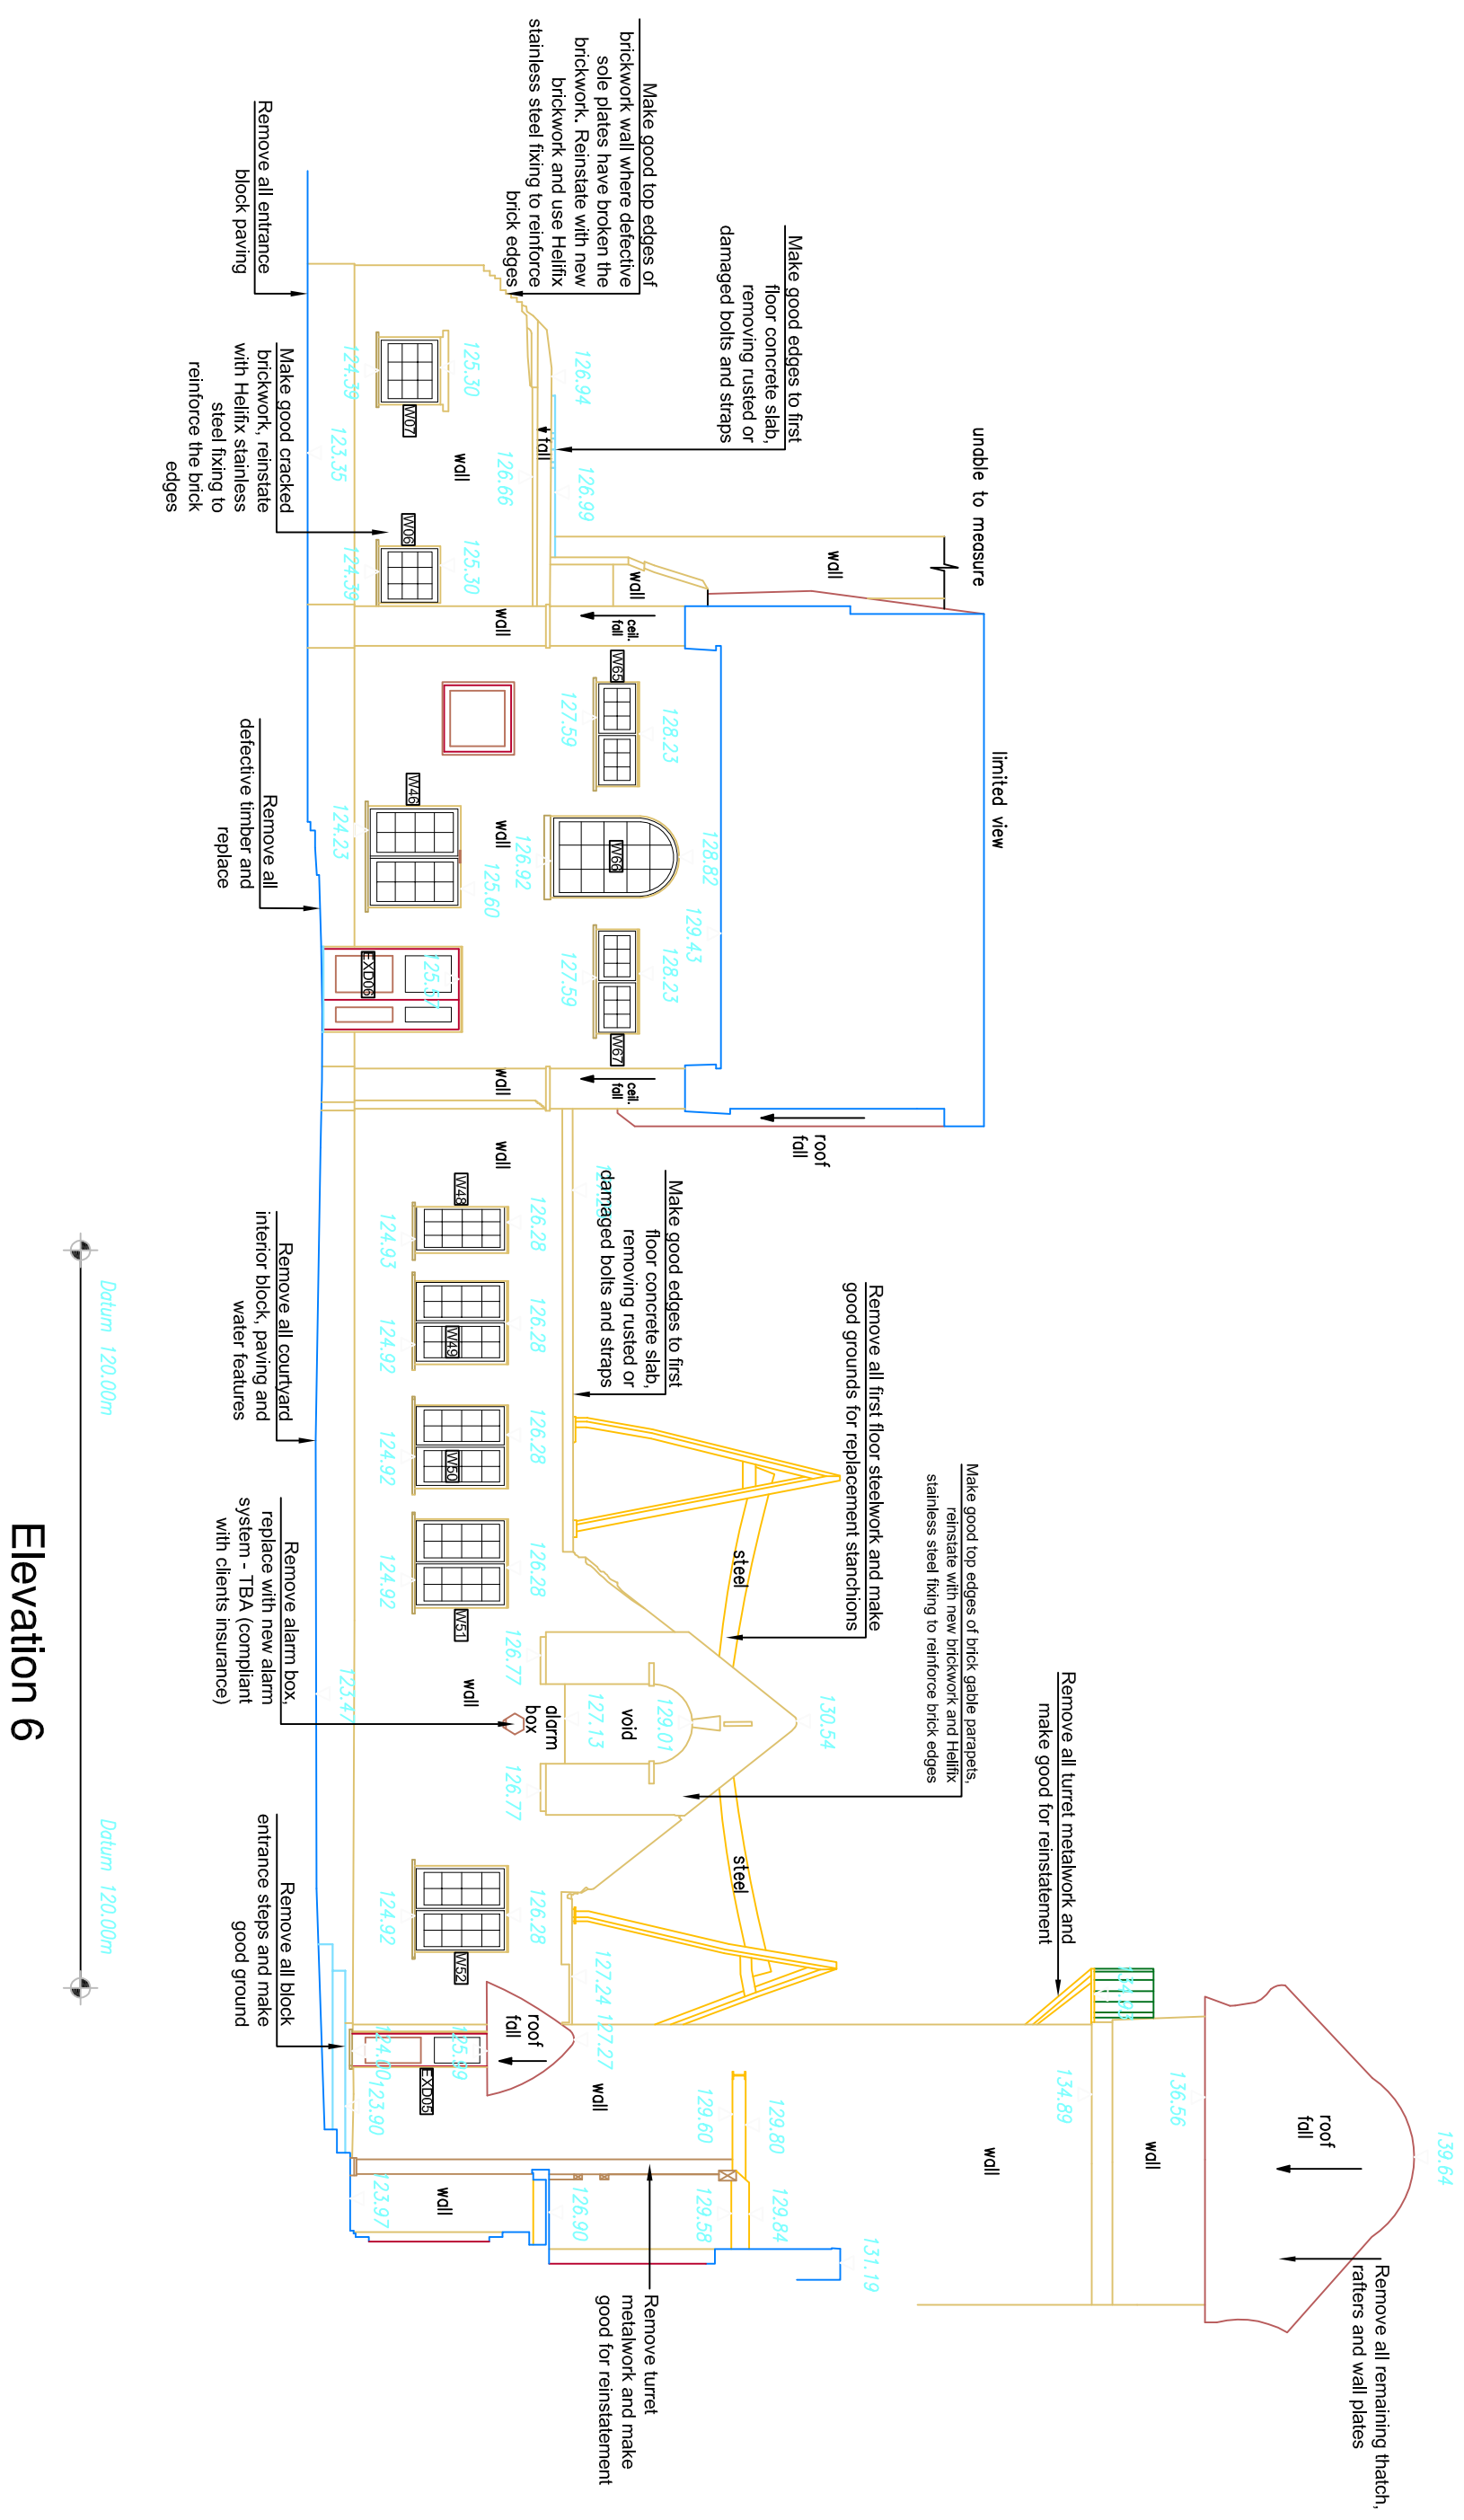

1. Inspect all window frames, door casings and window sashes
2. Clean down masonry surfaces and remove debris
3. Support any defective masonry and/or replace as necessary
4. Remove all rotten timber around and/or replace as necessary
5. Remove all rotten cut and splice new timber frame
6. Elements in small sections matched to match existing timber frame profiles
7. Repairs to timber are only applied to the back to match
8. Replace broken glass with single glazing (tempered glass 8mm above FFL)
9. Remove original mullions and / or replace with identical section
10. Remove original sashes and replace with new sashes
11. Rein weights and replace sash cords
12. Apply heavy strips to internal faces of box frames
13. Isolate all masonry joints, heads and sills from all new and old masonry
14. Repoint frame to masonry external reveals
15. Decorate with one coat undercoat and two top coats white paint